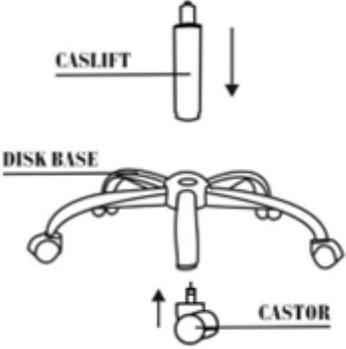
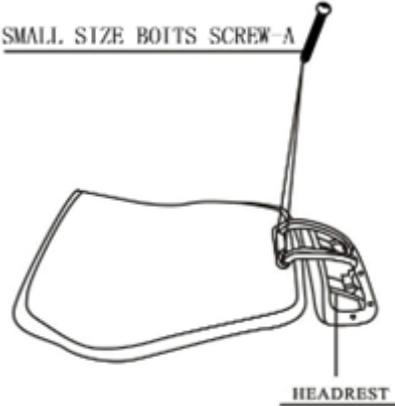
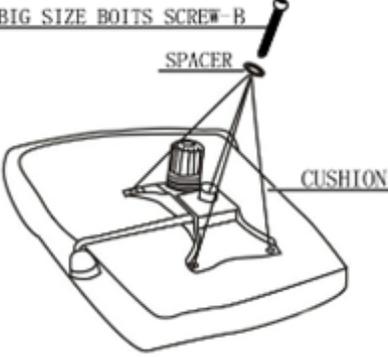
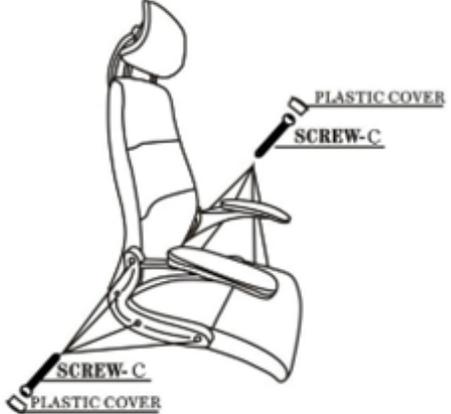
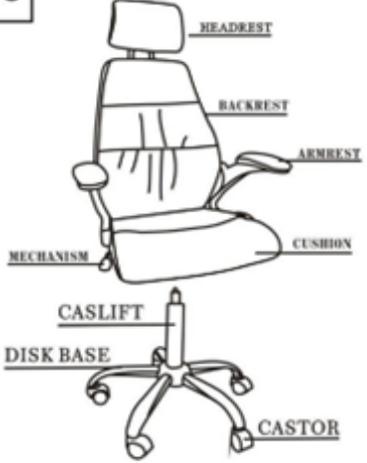


Instructivo de Armado Silla Ejecutiva Modena

<p>HEADREST x1</p> 	<p>CASTOR x5</p> 	<p>STEP 1</p> 	<p>STEP 2</p> 	<p>STEP 3</p> 
<p>BACKREST x1</p> 	<p>SMALL SIZE BOLTS SCREW-A (M6x20) x2</p> 	<p>STEP 4</p> 	<p>STEP 5</p> 	<p>FINISH</p> 
<p>CUSHION x1</p> 	<p>BIG SIZE BOLTS SCREW-B (M6x20) x4</p> 			
<p>ARMREST x1</p> 	<p>SCREW-C (M6x25mm) x8</p> 			
<p>MECHANISM x1</p> 	<p>PLASTIC COVER x8</p> 			
<p>GAS LIFT x1</p> 	<p>SPACER (M6x18mm) x4</p> 			
<p>DISK BASE x1</p> 	<p>SPANNER (M6x1)</p> 			